Waters & Farr Technical Guide

General Notes Regarding Drum Coilers for Polyethylene Pipes






Handling of drum coilers with and without polyethylene pipes must be performed safely, avoiding any injuries to the personnel and damage to the pipe and drum coilers – observe usual practice for safe handling of polyethylene pipes.

Drum coilers with polyethylene pipe are supplied with transport fixtures, which include:

- Brackets (lower and upper bracket) for restricting the pipe end with corresponding bolts and nuts (2 sets).
- Restricting plates (x2) with corresponding bolts and nuts (2 sets on each side of A-frame) affixing outer rim of the coiler to the bracket inside the A-frame.

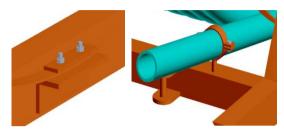






- Starting insert affixed to a spoke of the drum coiler holding internal end of the pipe with corresponding bolt and nut.
- Bolt with nut, which locks the brake pad to the outer rim of the drum coiler.



A spreader bar should be used when lifting drum coilers. Do not lift drum coilers through (or underneath) the outer rim of the drum — use specials lugs on sides of the A-frame (insert chain hooks into the lugs from outside).



Drum coilers with pipe on A-frames shall be stored and transported on flat even surfaces. Storage and transportation of drum coilers in tilted position presents a safety hazard and may cause damage to the drum coiler.

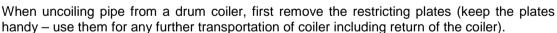



Then having safely secured the free end of the pipe, remove brackets restricting the pipe end on the A-frame (the brackets with bolts and nuts have to be returned together with the drum coiler). Secure free end of remaining pipe in the brackets prior to cutting off uncoiled portion of the pipe.

Firmly holding the brake in the same position (to avoid uncontrollable uncoiling), remove restricting bolt and nut (to be placed back at the end of uncoiling or during any breaks).

Control with brake speed of pipe uncoiling ensuring that the pipe is not left to uncoil uncontrollably and at the same time is not stretched during uncoiling.

Returning empty drum coiler, make sure that all accessories are in place.

Waters & Farr
105 Neilson St, Onehunga
PO Box 13329, Onehunga
Auckland, New Zealand
Phone +64 9 622 4036
Fax +64 9 622 4037

Information or advice contained in this Technical Guide or obtained from Waters & Farr otherwise is given in good faith. Waters & Farr make no warranty or representation regarding the information, opinions and recommendations contained in the Technical Guide. Users of the Technical Guide are advised to seek and rely upon their own professional advice and assessment of the matters contained in the Technical Guide. Waters & Farr excludes all liability to any user of the Technical Guide for consequential or indirect damages, or any other form of compensation or relief whatsoever for any acts or omissions of Waters & Farr, arising out of or in connection with the use of the Technical Guide irrespective of whether the same arises at law, inequity or otherwise.